


СЛАЙСЕР STARFOOD HBS-220A

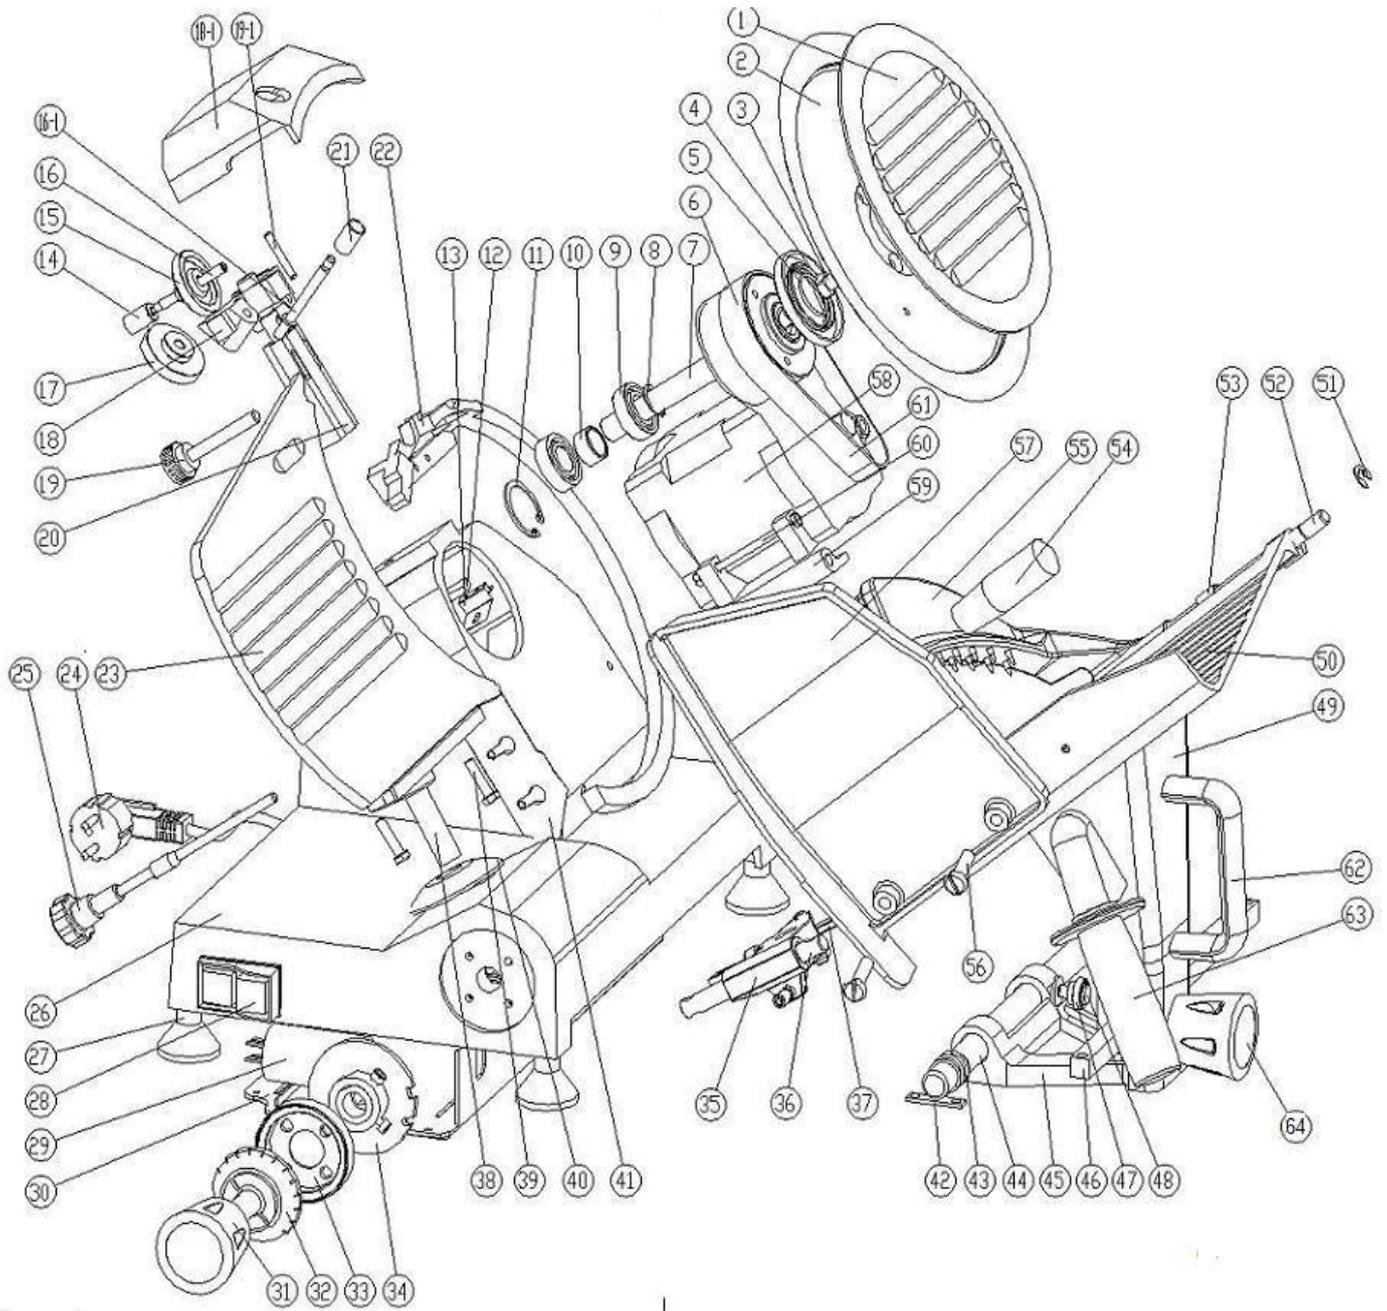

СЛАЙСЕР STARFOOD HBS-220A

| | | | |
|------|--------------------------------------|----|---|
| 1 | Blade protection plate | 37 | Axis for slide holder |
| 2 | Blade | 38 | holder for locking plate |
| 3 | Screw for blade | 39 | locking nut for locking plate |
| 4 | sealing ring for blade shaft | 40 | sealing ring for locking plate |
| 5 | sealing ring for blade spindle | 41 | scraping board |
| 6 | Sleeve of blade | 42 | locking board for circle orbit |
| 7 | Spindle of blade | 43 | spring for circle orbit |
| 8 | Blocking ring for bearing | 44 | circle orbit |
| 9 | Bearing | 45 | sliding frame |
| 10 | Isolating sleeve | 46 | square orbit |
| 11 | Blocking ring for hole | 47 | Spherical Bearings |
| 12 | Microswitch | 48 | Axis for sliding frame |
| 13 | bracket for microswitch | 49 | carriage stand |
| 14 | Button for sharpening stone | 50 | carriage |
| 15 | sharpening stone | 51 | Circlip |
| 16 | axis of sharpening stone | 52 | pole for carriage |
| 16-1 | axis of trim stone | 53 | bearing for pole of carriage |
| 17 | trim stone | 54 | handle of pressor |
| 18 | stand of stone | 55 | pressor |
| 18-1 | cover | 56 | French countersunk head screw |
| 19 | handlebar | 57 | protection board (includes screw) |
| 20 | stand of sharpner | 58 | motor |
| 21 | button for trim stone | 59 | bracket for motor |
| 22 | blade protection ring(include screw) | 60 | Hinge axis |
| 23 | locking plate | 61 | belt |
| 24 | wire and plug | 62 | U type handle |
| 25 | pole | 63 | round handle |
| 26 | body | 64 | Aluminum handle (only for 250L, 275L, 300L) |
| 27 | feet | | |
| 28 | switch | | |
| 29 | capacitor | | |
| 30 | bottom | | |
| 31 | Adjusting handlebar | | |
| 32 | digital ring plate | | |
| 33 | digital ring | | |
| 34 | cam | | |
| 35 | slide holder | | |
| 36 | slide axis | | |