



## ELECTRIC COOKING TOP

Pos	Code	Description
0001	MA1937400	ELECTRIC PLATE 300X300 [C] 4000W 400V
0002	CR0587230	SPACER [C] M8X13,5
0005	CR1095040	KNOB [C] SHAFT E15 D. 6
0006	MA9003088700	SPRING [C] KNOB - min. 10 pcs or multiples
0007	CR0581190	BUSH [C]
0008	CR1095170	METAL LABEL [C] E15
0009	CR0588510	GASKET [C] CONTROL PANEL 900
0010	CR0588950	EXTENSION [C] DRAIN PASTA COOKER 900
0011	CR0587500	ORANGE PILOT LAMP [C] Ø13,5MM 230V
0012	CR0587650	GASKET [C] SHAFT
0013	MA1616100	COMMUTATOR 0-6 [C] POSITION
0013	MA1937800	COMMUTATOR [C] 250V
0014	MA1878400	TERMINAL BLOCK [C]
0015	CR0588170	6 POLES TERMINAL BLOCK [C] 450V
0015	MA20802799	TERMINAL 6MM TERRA
0015	MA20806399	HANGER [C] TERMINAL
0015	MA20806499	ADESIVE SIGNAL L 1 8WA8 848-2AC
0017	CR1166930	FLUE GRID [C] M640