


Warning! The exploded views refer to the general model

TAV1

Pos.	Code	Previous code	Description	Notes	From:	To:
0001	RF11A00006		DOOR GASKET BF 121 BLACK			
0002	RF32H00016		DOOR PANEL RIGHT 121 OEM			
0003	RF28B00054		UPPER LEFT/RIGHT HINGE BF			
0004	FR4759240		HINGE [R] FOR PIVOT UPPER DOOR FOR PENTAV. BLAST CHILLER			
0005	RF35C00005		DASH COMPLETE WITH GLASS 121/161			
0006	RF11H00008		SS DOOR BRACKET LH/RH BF			
0007	RF11R00010		DOOR STOPPER - RIGHT			
0008	RF26D00003		LOWER PANEL LH/RH BF121 BLACK			
0009	RF37N00155		KIT PIANO AB 121/161			
0010	RF11A00011		DRIP GASKET BLAST CHILLER L=687			
0011	RF11R00004		CAP FOR BRACKET HOLE - LOWER PANEL BF			
0012	RF11N00000		MAGNET WITH THREADED PIN M5X9 D25			
0013	RF11D00099		PLASTIC MAGNETIC PROFILE HORIZ. L=735 BF 051/81/121/161			
0014	RF11D00104		PLASTIC MAGNETIC PROFILE VERTICAL L=994 BF121			
0015	RF28B00039		FRONT RACK BF 121			
0016	RF28B00040		REAR RACK BF 121			
0017	RF28C00004		SHELF SLIDE BC/BF 051/081/121/161			
0018	RF11R00003		BUSHING FOR FIXING RACKS SS BF			
0019	FR2110840		SPACER [C]			
0020	RF26A00005		REAR GRID COMPR. COMPARTMENT BF 121			
0021	BN011GENDESCR		NON UTILIZZATO SU QUESTO MODELLO			
0022	RF11R00009		DOOR STOPPER - LEFT			
0023	RF32H00017		DOOR PANEL LEFT 121 OEM			
0024	RF11M00002		CONDENSER FILTER SS NET 121-124			
0025	RF13E00012		CABLE CORE PROBE 8 WIRES L=1300			
0026	RF13E00018		CORE PROBE PT1000 4 POINTS HEATED L=1200			
0027	RF11R00006		SS SUPPORT CORE PROBE BF			
0028	FR4710700		PLASTIC CAP DRAIN BLAST CHILLER			
0029	RF11E00014		ASSEMBLY DRAIN 1GAS L=70 WITH RING			
0030	FR4740100		PROTECTION [R]			
0031	FR6510021		PIPE [R] 1 G ARFP 350L - PENTAV. BLAST CHILLER			
0032	FR2110980		SCREW [R] M5X10			
0033	RF11P00005		FEET SS H140 - 200			
0034	FR6810840		RUOTA S/F TSZ7 NPO 125/30 P2 GIR ROSSA			
0035	FR6810850		RUOTA C/F TSZ7 NPO 125/30 P2 GIR ROSSA			

Pos.	Code	Previous code	Description	Notes	From:	To:
0036	FR6350400		PLASTIC DRAIN TRAY [R] GN 1/1 H. 50			
0037	RF26F00015		DRAINPAN SLIDE			
0038	RF37N00109		KIT OVERFLOW BLAST FREEZER			

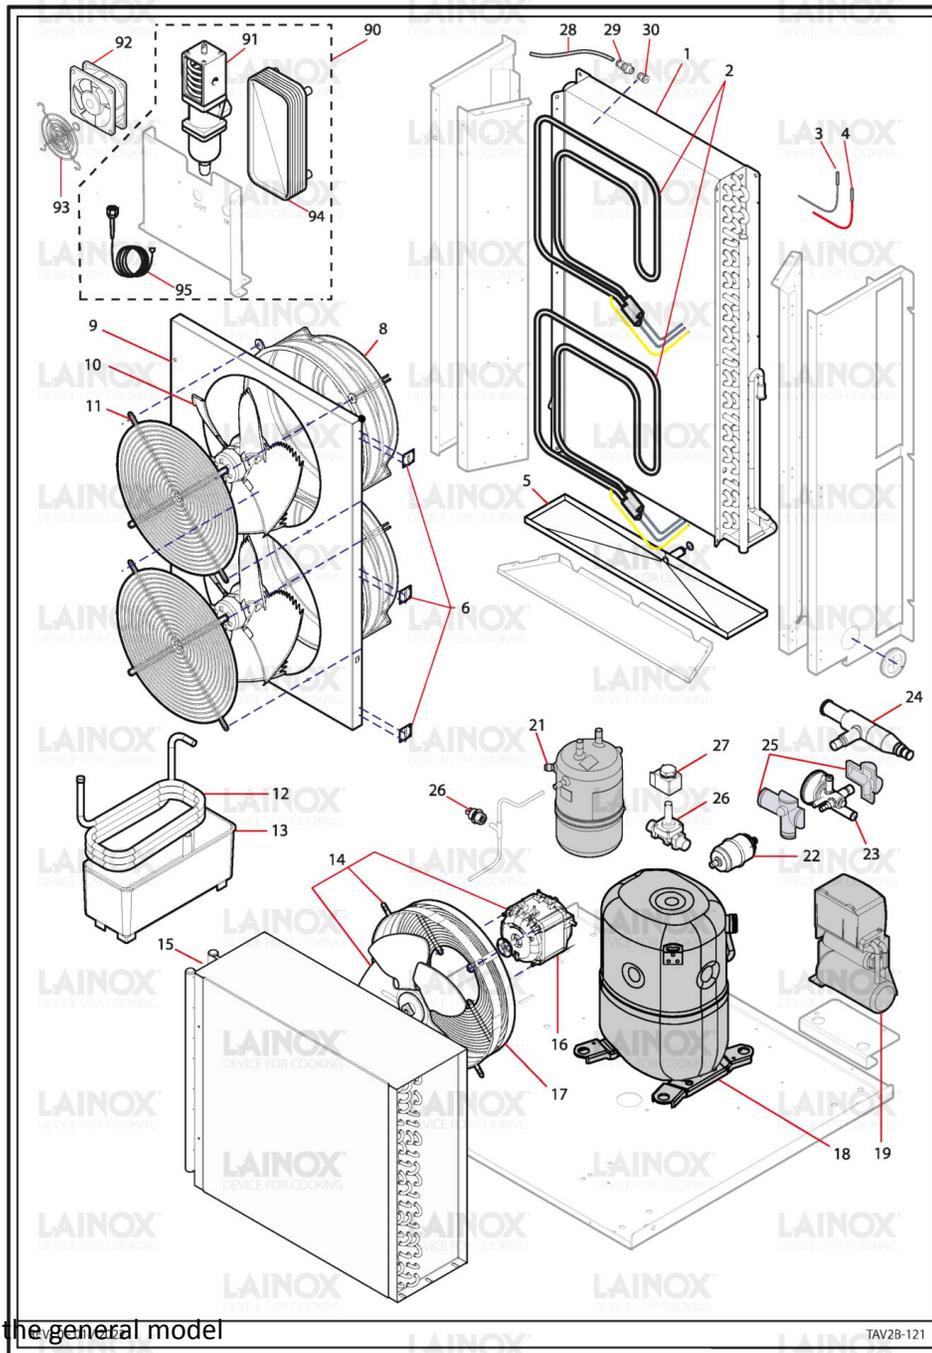


Warning! The exploded views refer to the general model

TAV28-121

TAV2

Pos.	Code	Previous code	Description	Notes	From:	To:
0001	RF12C00014		EVAPORATOR BF 121			
0002	RF13C00008		ARMOURED HEATING ELEMENT 800W			
0003	FR6631540		AIR PROBE [R] PTC L. 2500			
0004	FR6631260		EVAPORATOR PROBE [R] PTC L. 2500			
0005	RF36G00018		EVAPORATOR DRAIN PAN BF L=560			
0006	FR6410711		HINGE [R]			
0008	RF36H00019		ASSEMBLY GRID AND COLLAR - SUPPORT FAN D=350			
0009	RF28E00103		EVAPORATOR CONVEYOR L=570 D=360 ABF 121			
0010	RF13G00009		AXIAL FAN FN035-4IA.ZC.V 230/1 UL			
0011	RF11I00013		GRID PROTECTION FAN D=350 BF			
0012	RF12L00233		COIL TUBE DN10 BF121A	380-420/3N~/50		
0012	RF12L00313		COIL TUBE DN10 AB121A 60Hz	440-480/3N~/60   360-400/3N~/60 ! 208-230/3~/60		
0013	FR4740240		WATER DRAIN TRAY BLAST CHILLER NEW			
0014	BN011GENDESCR		NON UTILIZZATO SU QUESTO MODELLO			
0015	RF12B00008		CONDENSER BF 121	AIR COOLED		
0016	RF13G00011		AXIAL FAN FN040-6EK.OF.V 230/1/05-60	AIR COOLED		
0017	BN011GENDESCR		NON UTILIZZATO SU QUESTO MODELLO			
0018	RF12A00004		COMPRESSOR FH2480Z-XG1A TU 380-420/3/50	380-420/3N~/50		
0018	RF12A00029		COMPRESSOR H181CS 208-230/360-400/3/60	440-480/3N~/60   360-400/3N~/60 ! 208-230/3~/60		
0019	BN011GENDESCR		NON UTILIZZATO SU QUESTO MODELLO			
0020	RF12G00010		RECEIVER/SEPARATOR/HEAT EXCHANGER 100X242 ODS8 121-161			
0021	FR663B330		MINIPRESS.HBP 061F8196 AUT NC29,5/22			
0022	FR6525580		FILTER [R] DRIER DML033S			
0023	RF12H00020		THERMOSTATIC EXPANSION VALVE TUBE ORIFICE 8 MOP50			
0024	RF12G00019		PRESSURE REGULATOR KVL12 DIN-EN12			
0025	RF12Z00004		THERMOSTATIOC VALVE INSULATION TUBE			
0026	FR6850622		SOLENOID VALVE [R]			
0027	FR6851142		COIL [R] 220/240V 50/60HZ			
0028	RF14D00019		TUBE FOR WATER 4x6 MM æ" WRAS			
0029	RF14D00012		PUSH-IN NOZZLE-HOSE FITTING Å¼-4X6			
0030	RF11Z00000		HUMIDITY NOZZLE 1/4 AISI 316			
0090	BN011GENDESCR		NON UTILIZZATO SU QUESTO MODELLO	WATER COOLED		

Pos.	Code	Previous code	Description	Notes	From:	To:
0091	BN011GENDESCR		NON UTILIZZATO SU QUESTO MODELLO	WATER COOLED		
0092	BN011GENDESCR		NON UTILIZZATO SU QUESTO MODELLO	WATER COOLED		
0093	BN011GENDESCR		NON UTILIZZATO SU QUESTO MODELLO	WATER COOLED		
0094	BN011GENDESCR		NON UTILIZZATO SU QUESTO MODELLO	WATER COOLED		
0095	BN011GENDESCR		NON UTILIZZATO SU QUESTO MODELLO	WATER COOLED		

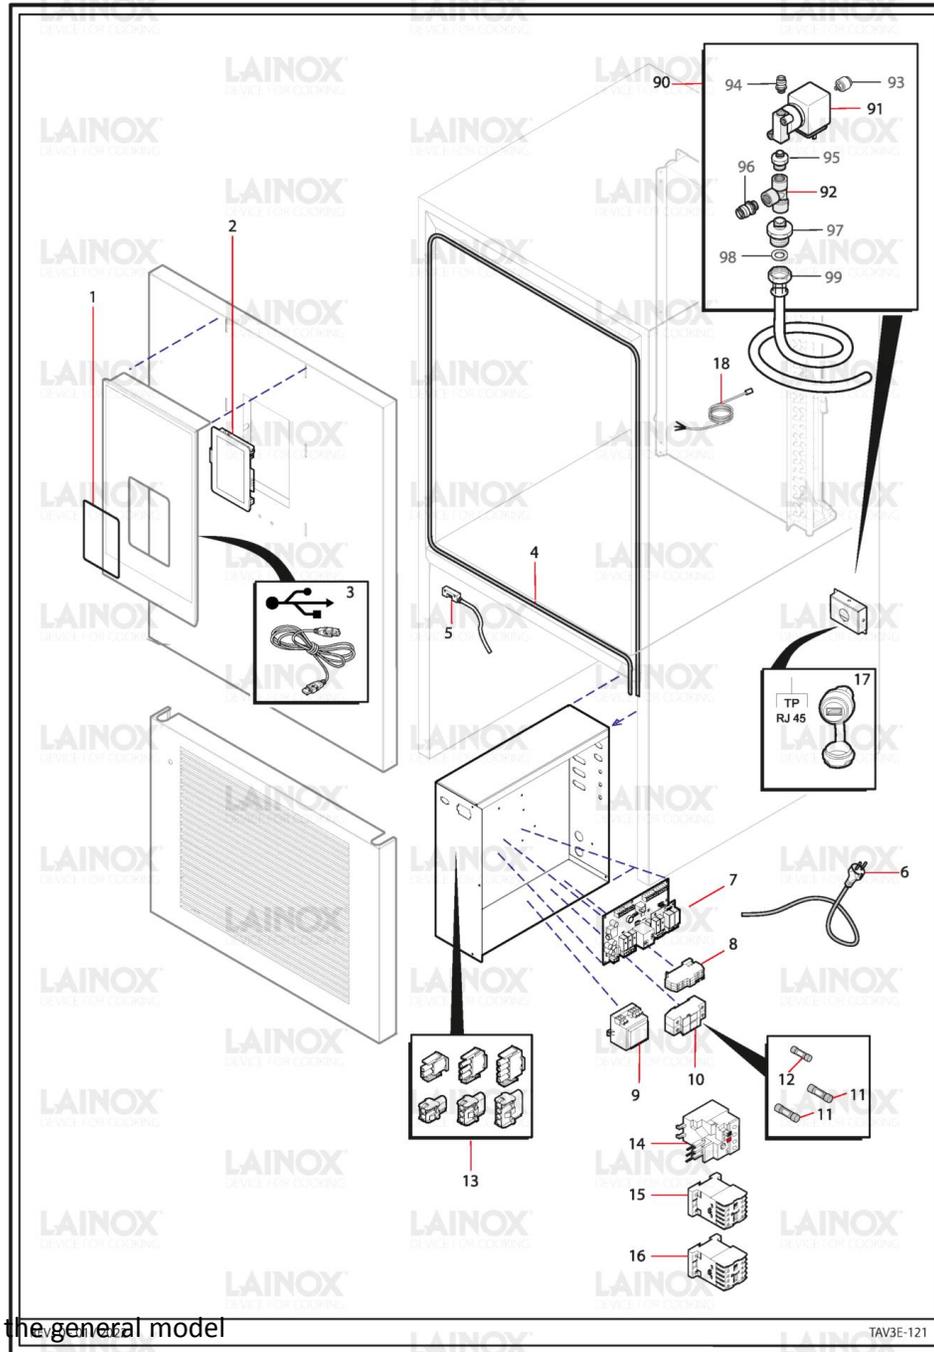

Warning! The exploded views refer to the general model

TAV3E-121

TAV3

Pos.	Code	Previous code	Description	Notes	From:	To:
0001	RF11A00013		GASKET DISPLAY 7			
0002	RF13A00035		DISPLAY 7 MULTI NEO24 LNX			
0003	LA65302600		CONNECTING CABLE [C] BOARD/USB OUTLET L. 850			
0004	RF13C00012		DOOR HEATING ELEMENT 120/121 L=3280 UL			
0005	FR6640291		MAGNETIC MICROSWITCH [R] DOOR			
0006	RF13J00022		POWER CABLE SCHUKO BF 121-161			
0007	RF13A00034		POWER BOARD NEO24 LNX			
0008	RF13N00026		FUSEHOLDER TERMINAL 5X20			
0009	RF13B00011		TRANSFORMATOR 230/12 36VA 25TR036C			
0010	FR6649440		PORTA FUSIBILE ITALWEBBER MOD. BCH3X38			
0011	FR6641350		FUSIBILE 10X38 WEBER 16A AM			
0012	FR6648580		FUSIBILE 5X20 RAPIDO 500mA			
0013	BN01SERVICE		PER IDENTIFICAZIONE CONTATTARE SERVICE			
0014	RF13M00091		THERMAL OVERLOAD RELAY 4-6A, 1NA+1NC	380-420/3N~/50   440-480/3N~/60   360-400/3N~/60		
0014	RF13M00098		THERMAL OVERLOAD RELAY 6-10A 1NA+1NC	208-230/3~/60		
0015	RF13M00089		CONTACTOR DILM12-10 (230V 50/60HZ) 3P+1N	380-420/3N~/50   440-480/3N~/60   360-400/3N~/60		
0015	RF13M00102		CONTACTOR DILM15-10 (230V 50/60HZ) 3P+1N	208-230/3~/60		
0016	RF13M00081		CONTACTOR DILM9-10 (230V 50/60HZ) 3P+1N	3~/50-60 Hz		
0017	RF13K00011		PG CONNET. ILME CHV WQG29P29B			
0018	RF13J00055		SAFETY THERMOSTAT BF 120-121-161-122			
0090	RF47R00010		KIT HUMIDITY VALVE BF MULTIFUNCTION			
0091	RF12G00009		3-WAY SOLENOID VALVE E371AM25/1/U35E 316 UL			
0092	RF14D00013		T-PUSH-IN 1/4 x 1/4 x 5/16			
0093	BN01SERVICE		PER IDENTIFICAZIONE CONTATTARE SERVICE			
0094	BN01SERVICE		PER IDENTIFICAZIONE CONTATTARE SERVICE			
0095	BN01SERVICE		PER IDENTIFICAZIONE CONTATTARE SERVICE			
0096	BN01SERVICE		PER IDENTIFICAZIONE CONTATTARE SERVICE			
0097	BN01SERVICE		PER IDENTIFICAZIONE CONTATTARE SERVICE			
0098	BN01SERVICE		PER IDENTIFICAZIONE CONTATTARE SERVICE			
0099	BN01SERVICE		PER IDENTIFICAZIONE CONTATTARE SERVICE			